



iTAKSi

M12 TAXIMETER

USER GUIDE


This document provides information to assist in the users. Alberen Electronics Limited reserve the right to change the specification of its products without notice. If any further information is required, please contact your local dealer!

Issue 1. April 2015


CONTENTS	Page No
1. VIEW.....	3
1.1. FRONT VIEW.....	3
1.2. REAR VIEW.....	3
2. CABLES.....	4
2.1. POWER CABLE.....	4
2.2. POWER CABLE WITH SEAT SENSOR.....	4
2.3. PRINTER CABLE.....	4
3. KEY FUNCTIONS.....	5
4. SOME SCREEN EXPRESSIONS WHILE THE TAXIMETER IS ON.....	5
5. CHARACTER TABLE.....	5
6. OPENING THE TAXIMETER	6
6.1. OPENING THE TAXIMETER AS ADMIN.....	6
7. DISPLAY TIME AND DATE.....	7
8. DISPLAY SPEED.....	8
9. OPENING AND SELECTING THE TARIFF.....	8
9.1. TARIFF STRUCTURE.....	9
9.2. ENTERING EXTRA FEE.....	11
10. CLOSING THE TARIFF.....	11
11. ENTERING MENU.....	12
11.1. MENU TABLE.....	12
12. CLOSING THE TAXIMETER.....	14
13. SEAT SENSOR CONNECTION.....	14
14. PRINTER CONNECTION.....	14
15. ROOF LAMP CONNECTION.....	15

1. VIEW

1.1. FRONT VIEW

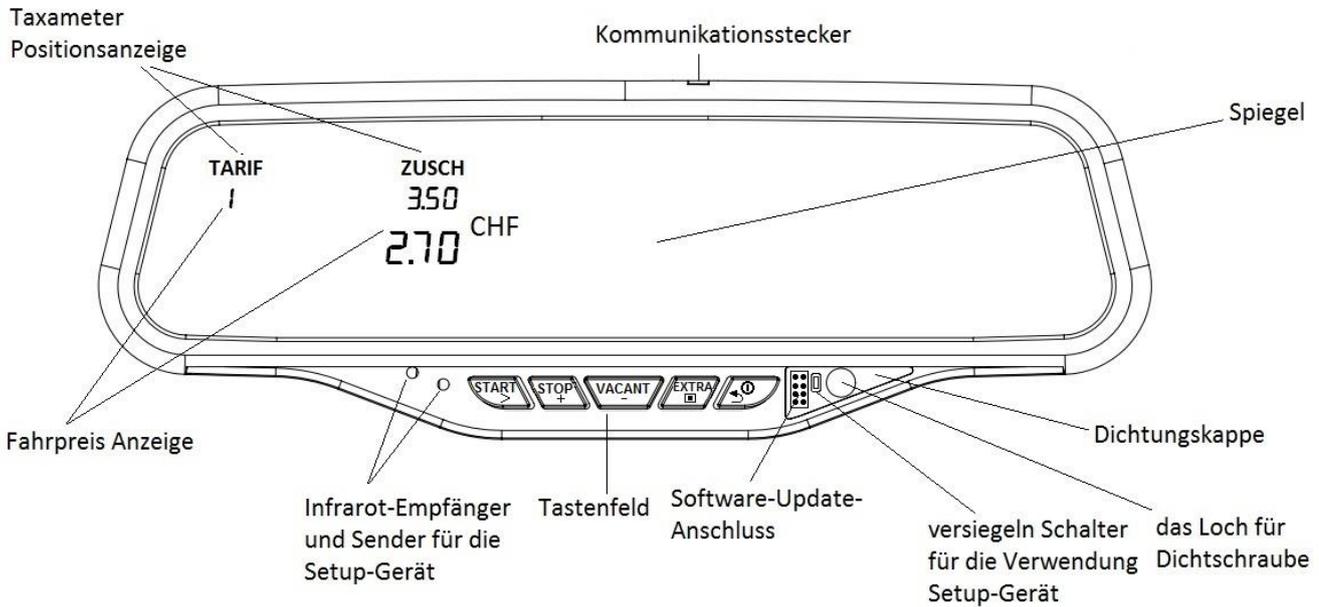


1.2. REAR VIEW

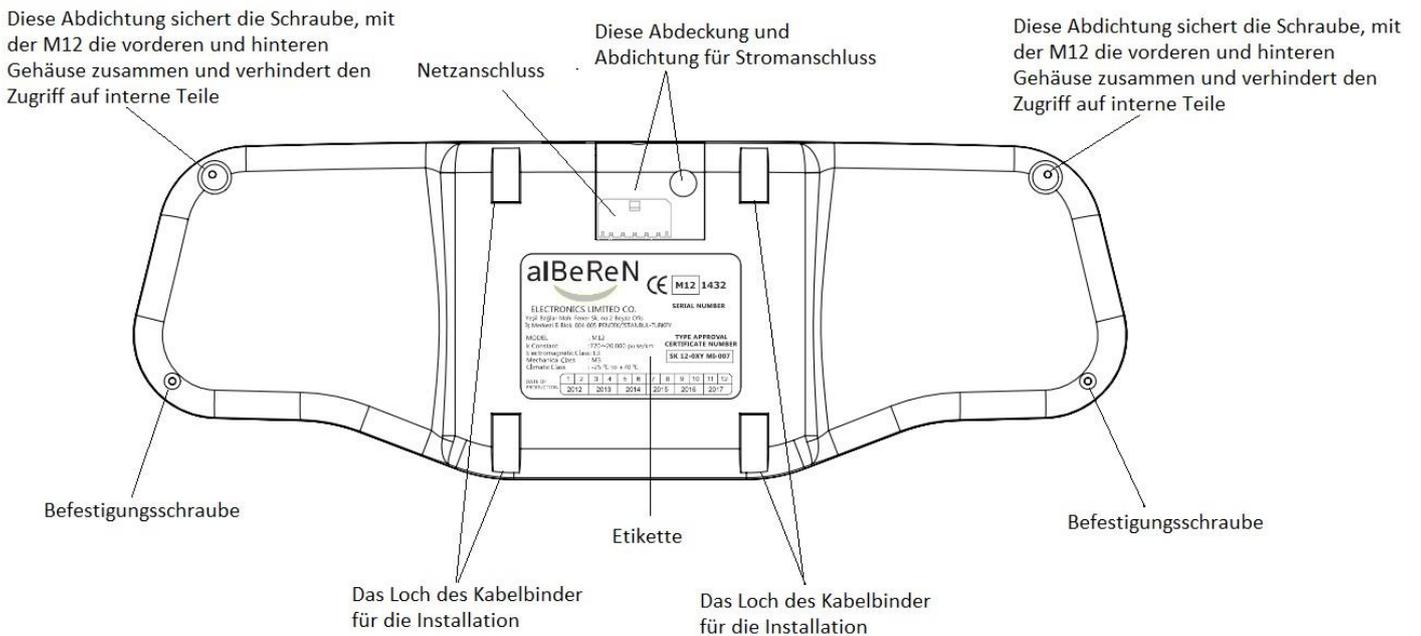


2. CABLES

2.1. POWER CABLE

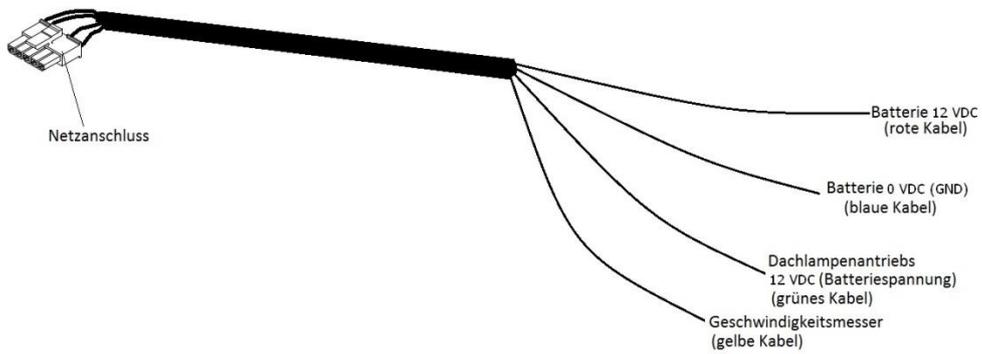

2.2. POWER CABLE WITH SEAT SENSOR

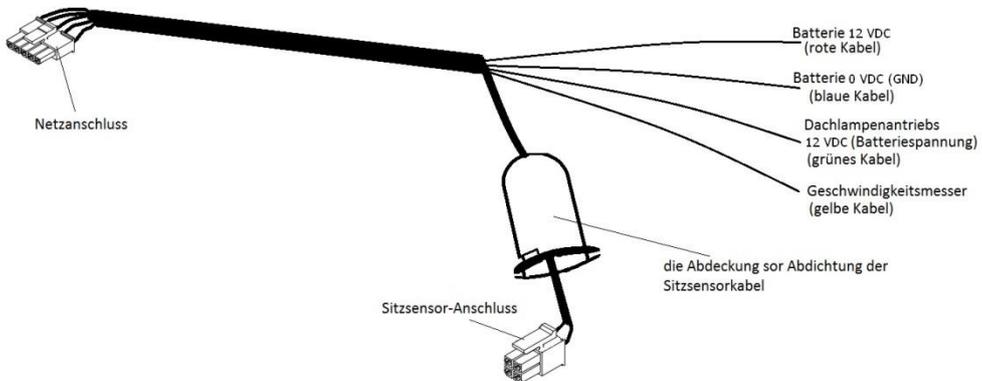

2.3. PRINTER CABLE



3. KEY FUNCTIONS

Keys	In mode "FOR HIRE"	In mode "HIRED"	While browsing in the menu	While changing parameters
	Starts the tariff	Select different tariff	Starts the tariff	Scroll digit
	Show time and date in three different format	Stop the tariff	Change to the next menu parameter	Increment digit
	Show last fare, meter counting, speed	Pass to mode "FOR HIRE"	Change to the previous parameter	Decrement digit
	Enter menu	Increment extra fee	Pass to sub menu	Confirm the changes
	Cancel time, date, or speed showing	Cancel extra fee entered	Pass to the top menu	

4. SOME SCREEN EXPRESSIONS WHILE THE TAXIMETER IS ON

ENGLISH	EXPLANATION
FOR HIRE	
HIRED 1,2,3,...	HIRED Mode
STOPPED	Payment-Fare position (Total Fare)
EXTRA	while there are extra fare in the top screen

5. CHARACTER TABLE

Space	Space
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

? (Ö)	ö
@ (Ü)	ü
A	À
B	ß
C	Ç
D	Ð
E	É
F	ƒ
G	ƒ
H	h
I	ı


J	Ĵ
K	Ʒ
L	Ł
M	ñ
N	ñ
O	o
P	Ɔ
Q	q
R	ƚ
S	Ɔ
T	ƚ

U	U
V	v
W	ŵ
X	Ɔ
Y	Ɔ
Z	Ɔ

6. OPENING THE TAXIMETER

While the taximeter is turned off (there is no text on the screen);


If it is pressed to any key of the taximeter, driver selection menu is shown in upper screen. Also shift number is shown in lower screen. When each taximeter is closed and opened, shift number is incremented.

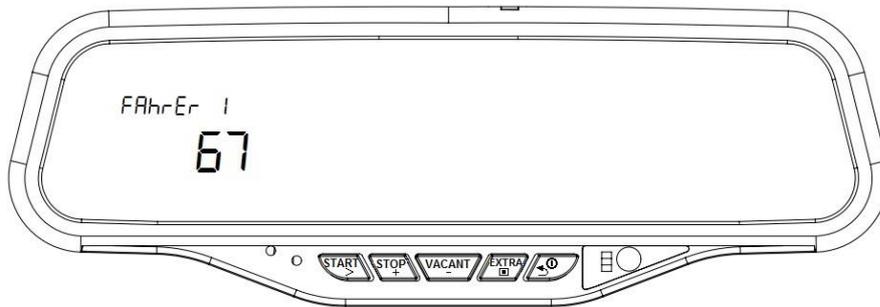

The driver can be changed by pressing  or .

There are 3 different users (drivers) in the taximeter. 4. User is admin. Separate records for every 3 drivers are saved. Fourth user-admin can see all records.

Later, if any password is entered for the drivers, the password menu is shown in the screen after pressed  button.

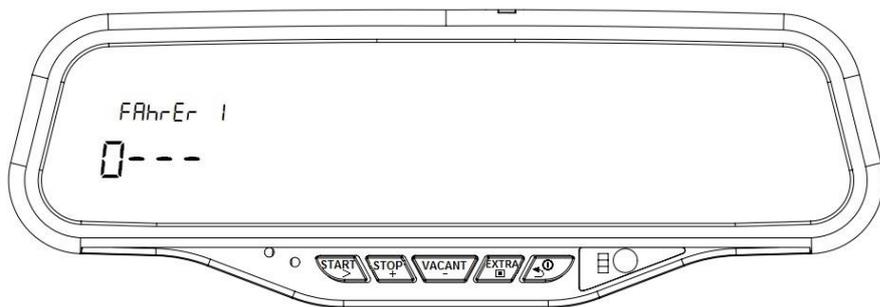

4-digit password is entered using ,  and  buttons. Later, the taximeter is opened pressing  button.

6.1. OPENING THE TAXIMETER AS ADMIN

Fourth user of the taximeter is admin. When taximeter is opened as admin, the tariff is not opened.

It can be seen all revenue records of the 3 different drivers by admin. This records can be printed by admin. Also they can be erased by admin.

Drivers and admin passwords can be changed by admin.


7. DISPLAY SHIFT NUMBER

In FOR HIRE position when pressed  button, taximeter shows shift number. When each taximeter is closed and opened, shift number is incremented.


8. DISPLAY TIME AND DATE

There are three formats for showing time-date in the taxi meter:


When  button is pressed once in the “FOR HIRE position, time is shown in the upper screen as at the below.

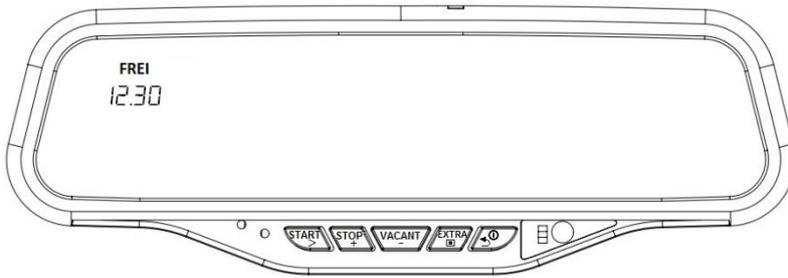

When  button is pressed a second time.

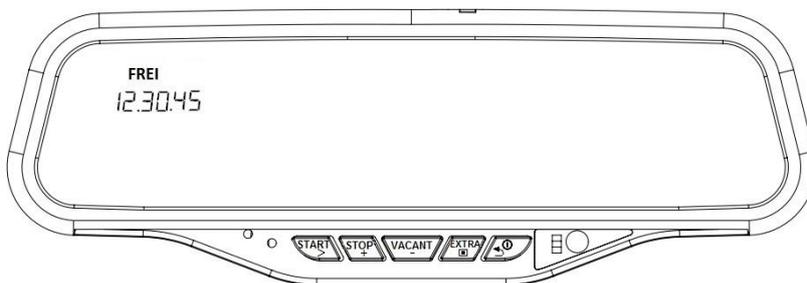

Lastly, when  button is pressed a third time.

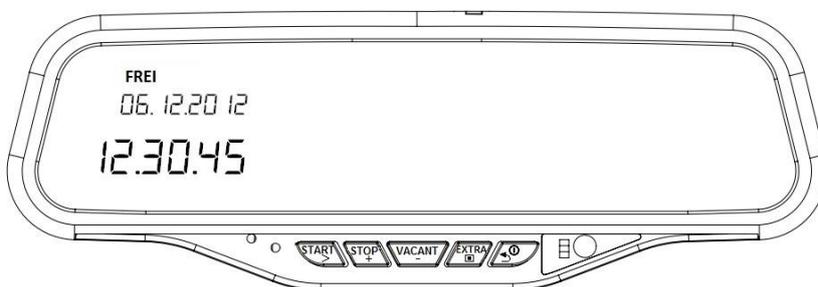


If the taximeter doesn't receive speed signal, the time-date information remains in the screen for 60 seconds.

9. DISPLAY LAST FARE, METER MEASUREMENT AND SPEED


When  button is pressed firstly in the “FOR HIRE position, fare of the last trip is shown in the sub screen as at the below.



Press again  button, meter measurement is shown in the screen as at the below. When vehicle moved, counter starts to count in meters.

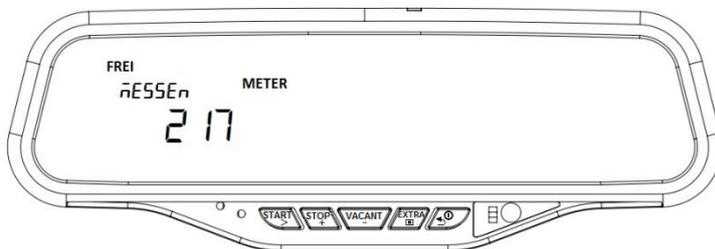


Press again  button, speed of the vehicle is shown in the screen as at the below.

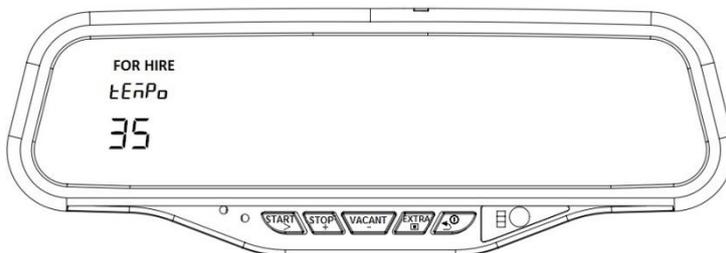


If the taximeter doesn't receive speed signal, the speed remains in the screen for 60 seconds

10. OPENING AND SELECTING THE TARIFF

When it is pressed to  button first time in the “FOR HIRE” position, the Tariff 1 is opened from the initial charge of Tariff 1 and the taximeter starts to calculate time and distance.

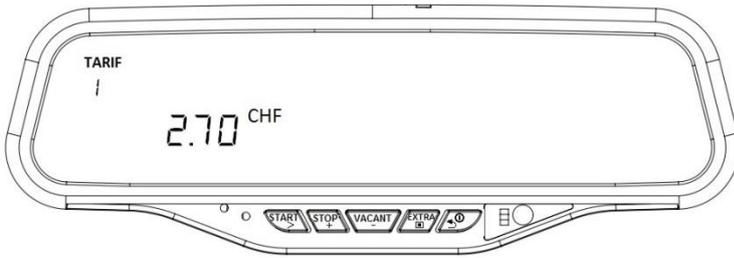

While the tariff is open, the tariff can be changed between loaded tariffs in 50 meters distance.

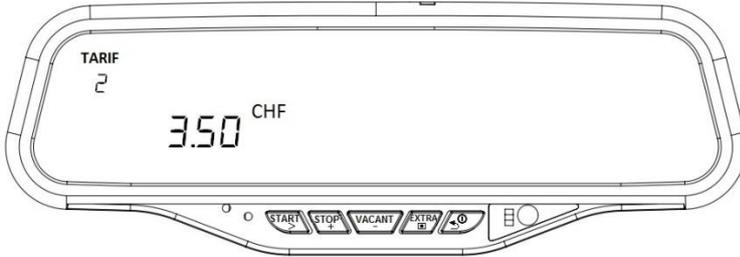

10.1. TARIFF STRUCTURE

More than 30 tariffs can be loaded to M12 Mirror Taximeter. Also the automatic change of tariffs can be triggered by the distance, duration and fare. You can see the tariff data at the table below.

M12 Taximeter tariff information		
The period of validity loaded tariff depends tariff type. All detailed tariff information can be shown on print out. Only information of the active tariffs can be shown on the taximeter screen at that moment. There are three types of the tariffs: Normal (N), Daily (D), Weekly (W) The tariffs can be set according to specific date range periodically for every year: (HN), (HD), (HW) Tariffs can be set according to specific date range: (SN), (SD), (SW) Date-time formats of tariff validity duration are shown at the table		
Tariff date-time types	Date-time formats	Explanation
Normal (N)	ALL YEAR ALL TIME	All Year, All Time
Daily (D)	ALL YEAR HH:MM-HH:MM	All Year, Specific time interval
Weekly (W)	ALL YEAR MON HH:MM-HH:MM TUE HH:MM-HH:MM WED HH:MM-HH:MM	All Year, Specific time of the week days
Holiday Normal (HN)	START DD/MM HH:MM END DD/MM HH:MM	Specific Date Interval for every year, start time of first day and end time of last day

Holiday Daily (HD)	DATE DD/MM-DD/MM TIME HH:MM-HH:MM	Specific Date Interval for every year, Specific time interval
Holiday Weekly (HW)	DATE DD/MM-DD/MM MON HH:MM-HH:MM TUE HH:MM-HH:MM WED HH:MM-HH:MM	Specific Date Interval for every year, Specific time of the week days
Specific Normal (SN)	START DD/MM/YY HH:MM END DD/MM/YY HH:MM	Specific Date Interval, start time of first day and end time of last day
Specific Daily (SD)	DATE DD/MM/YY - DD/MM/YY TIME HH:MM-HH:MM	Specific Date Interval, Specific time interval
Specific Weekly (SW)	DATE DD/MM/YY - DD/MM/YY MON HH:MM-HH:MM TUE HH:MM-HH:MM WED HH:MM-HH:MM	Specific Date Interval, , Specific time of the week days
<p>HH: Hour Hour, MM: Minute Minute, MM: Month Month, DD: Day Day, YY: Year Year If the “start time” bigger than “end time” in the daily and weekly tariffs, it’s mean: 00:00 to End Time and Start Time to 23:59</p>		

Tariff Parameters	Tariff 1	Tariff 2	Tariff 3	Tariff 40
Init Charge (cent)					
Init Distance (meter/10)					
Init Duration (second/16)					
Unit distance(meter/100)					
Unit time (second/64)					
Unit distance fare (cent/10)					
Unit time fare (cent/10)					
Unit extra fare (cent/10)					


Tariffs which changed automatically as depends <u>distance</u> of the journey					
	Tariff 1	Tariff 2	Tariff 3	Tariff 16
Limit distance (meter)					
Unit distance or unit distance fare (meter/100 or cent/10)					
Unit time or unit time fare (meter/64 or cent/10)					

Tariffs which changed automatically as depends <u>duration</u> of the journey					
	Tariff 1	Tariff 2	Tariff 3	Tariff 8
Limit duration(second)					

Unit distance or unit distance fare(meter/100 or cent/10)					
Unit time or unit time fare (second/64 or cent/10)					
Tariffs which changed automatically as depends <u>fare amount</u> in the journey					
	<i>Tariff 1</i>	<i>Tariff 2</i>	<i>Tariff 3</i>	<i>Tariff 8</i>
Limit fare amount(cent/10)					
Unit distance or unit distance fare(meter/100 or cent/10)					
Unit time or unit time fare (second/64 or cent/10)					
Tariffs which changed automatically as depends <u>speed exceeding</u> in the journey					
	<i>Tariff 1</i>	<i>Tariff 2</i>	<i>Tariff 3</i>	<i>Tariff 8</i>
Limit Speed (km/h)					
Sub Limit of the speed exceeding duration (Second)					
Unit distance or unit distance fare(meter/100 or cent/10)					
Unit time or unit time fare (second/64 or cent/10)					

10.2. ENTERING EXTRA FEE

While the tariff is open, the extra fee is entered to upper screen by pressing extra button repeatedly.

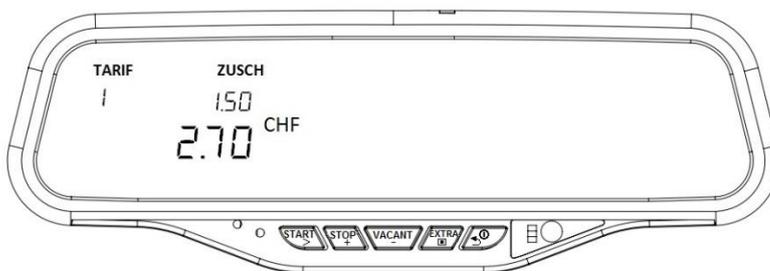


When it is pressed to extra button, extra fee is increased up to unit extra fee which loaded to the taximeter.

11. CLOSING THE TARIFF


After the tariff is opened;

If 50 meters are not passed or if the fare has not increase, the tariff can be canceled by pressing  button.

Otherwise, it should be pressed  button firstly to close the tariff. So, total fare is shown sub screen as shown below.

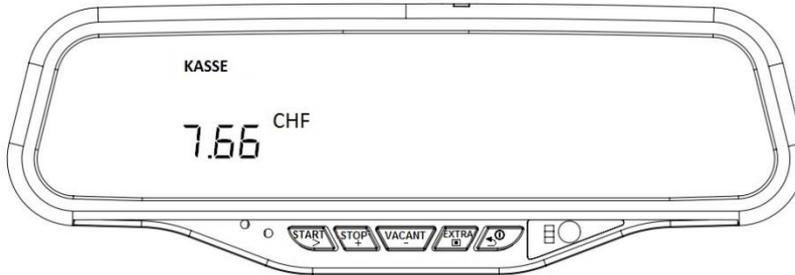

If a printer is connected to the taximeter, it can be selected "Print" by pressing  button again as shown below.

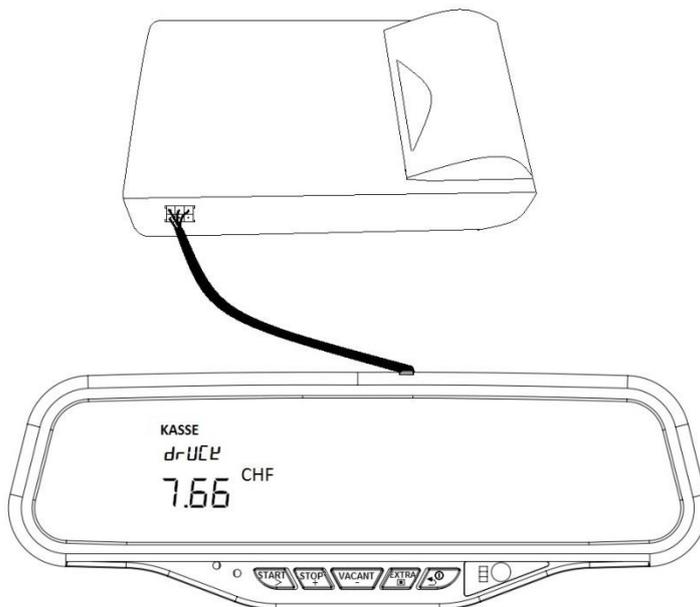

After selected "Print" or "total", pressed  button. If 10 seconds have passed after  button pressed, the taximeter will pass to the "FOR HIRE" position. Otherwise, taximeter waits for 10 seconds in the "FARE" position. If selected Print, the printer prints a receipt.

12. ENTERING MENU

It can be reached to the menu by pressing  button in the "FOR HIRE" position. All information (as counters, setting parameters, etc) are shown in menu.

Structure of the menu is shown in menu table at the below.

12.1. MENU TABLE

MAIN MENU	1.SUB MENU	2.SUB MENU	3.SUB MENU	4.SUB MENU	
bErI ChE Revenues	FAhrEr 1 Driver 1	tot Eñ Total distance (km)	If the taximeter is opened as Driver 1, Driver 2 or Driver 3; passing 1.SUB MENU (DRIVER 1, DRIVER , DRIVER 3 menu), directly reached to 2.SUB MENU (TOT DIST, HIRED DIST,... menu) of the driver. Counters can be printed if a printer connected.		
		bESZt Eñ Hired distance (km)			
		AnZ FhrE Custom number			
		ZUSChLAG Total Extra Fare			
		UnSAbZ Total Fare			
		drUCK Print the info			
	FAhr EEn Driver Password	EEnn ALt Old password	EEnn nEU New password		
	FAhrEr 2 Driver 2	If the taximeter has opened as administrator or entered to the menu with REMOTE CONTROL DEVICE, it is not asked old password. Also in this case, print out of the counters is printed for 3 drivers separately			
	FAhrEr 3 Driver 3				
	Adñ n Administrator	FAhr EEn Driver Password	EEnn nEU New Pwrđ		
tot ūE9 Total Vehicle Km (Taximeter odometer) 0 KM					
bEr LoSC Erase Revenues	LoESChEn Erase!!!	All revenues information are erased			
MAIN MENU	1.SUB MENU	2.SUB MENU	3.SUB MENU	4.SUB MENU	
tAh I nFo Taxi Information	UhrZEI t Time	These parameters can be changed using only the Remote Control Device			
	dAbUñ Date				
	EonSt E Constant k				
	EEnnZEI C Vehicle registration number				
	LI ZEñZ Taxi licence number				
	SErI E nr Taximeter Serial Number				
	ZUSC ErL Permission for entering extra fee (Yes-No)				
	Uhr EI nS Permission of time setting (Yes-No)				
	EEnn EI n Driver password (Yes-No)				
	ErF ūECh Automatic switching Tariff 1 to Tariff 2 (Yes-No)				
	LI ChE An Time of the light on for roof lamp	These parameters can be change by users			
	LChE AUS Time of the light off for roof lamp				
	drUCK Print the information	All taxi information parameters can be printed if a printer connected			
ErF I nFo Tariff Information	tArI F 1 Tariff 1	grUndPrS Initial charge			
		ErSt ūE9 Initial distance			
		ErStZEI t Initial time			
		ūE9 EI nh Unit distance	While a limit meter values are shown at the upper display for auto distance tariffs, unit distance or unit distance fare values are shown at the lower display.		
		ZEI tEI nh Unit Time			
		ūE9PrEI S Unit distance fare			
		ZEI tPrEI Unit time fare			
		EHEPrEI S Unit extra fare			
		B00- Sample limit meter value for auto distance tariffs			
		drUCK Print Information			
All tariff information (tariff 1,2,3,) can be					

			printed if a printer connected	14
	ⒶRrIF 2	Tariff 2		
	ⒶRrIF 3	Tariff 3		
			
	ⒶRrIF 10	Tariff 10		
Printer Reports	ⒶRrIF 2	Daily Report	0----- 6 digit password	
	ⒶRrIF 3	Total Counter Report	Time (unit: 0.5 second) on the top screen. Pulse counter on the sub screen	
	ⒶRrIF L	Totals Report for past days (Maybe last 30 days)	The Remote Control Device Code which has changed the parameters as date, serial number or constant k	
Distance and Time Test			This measurement menu can be shown using only the Remote Control Device	
Software Version and Setup info			The Remote Control Device Code which has changed the parameters as date, serial number or constant k	


13.CLOSING THE TAXIMETER

In FOR HIRE position when pressed  button, taximeter firstly shows shift number.

To close the taximeter, it is pressed to  button minimum 2 seconds while in the “FOR HIRE” position. While the taximeter is closed, when pressed any button, it passes to driver selection menu

14.SEAT SENSOR CONNECTION

Two pin of the seat sensor are connected to seat sensor pins of the power cable with seat sensor. It is not important which pin of the seat sensor to which pin of the seat sensor pins of the power cable.

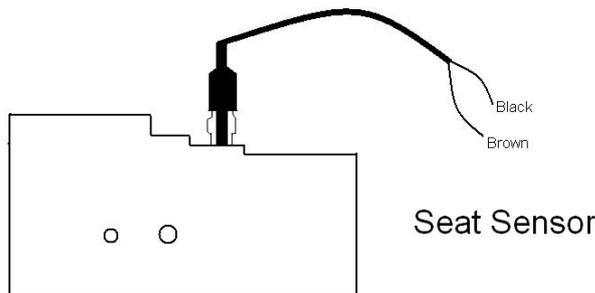


If the seat sensors are connected to the taximeter;

When passengers boarded the taxi, if taxi driver doesn't start the taximeter, the taximeter starts to record that trip as off the record. So, taximeter saves every non tariff trips (maximum record capacity is 900).


After counters of the taximeter are printed , if there are the records of the non tariff trips, these record is printed in continuation of the report.

15. PRINTER CONNECTION

The Printer Cable is connected to Printer and printer connector of the taximeter. The printer gets power from the taximeter via printer cable.

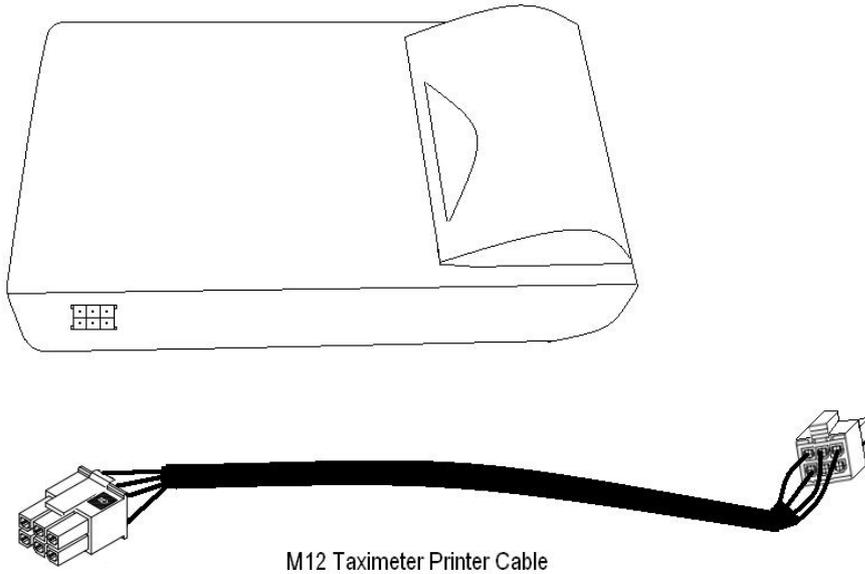

Both connector of the printer cable are same. One end of the cable connected to the taximeter and other end connected to the printer

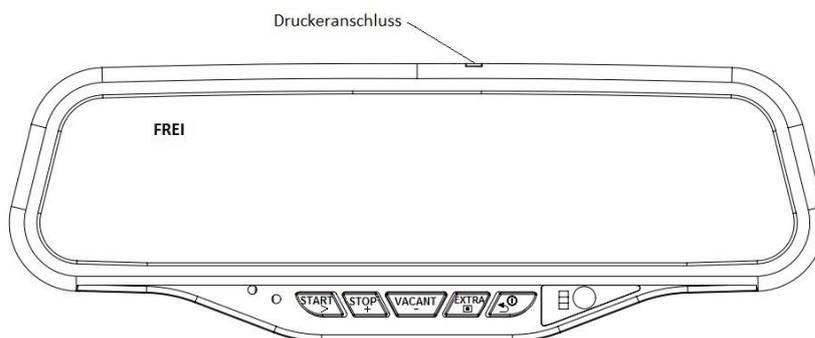

16. ROOF LAMP CONNECTION

The green cable of the power connector is connected to the positive pole of the roof lamp, other ground pole of the roof lamp is connected chassis of the vehicle.